


trunki®

Making travel child's play

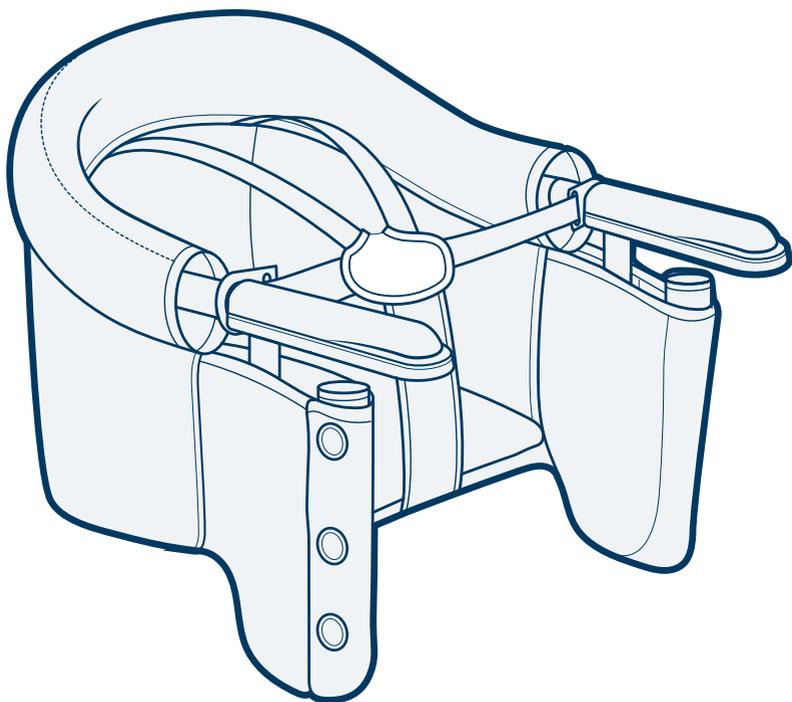


Dining Clamp Seat

Instruction Booklet

Read all instructions before assembly and use of chair. Keep instructions for future use.



Parts List







DE Teileliste. **FR** Liste des pièces. **ES** Lista de piezas. **IT** Elenco delle parti. **NL** Onderdelenlijst. **PL** Lista części. **CZ** Seznam dílů.




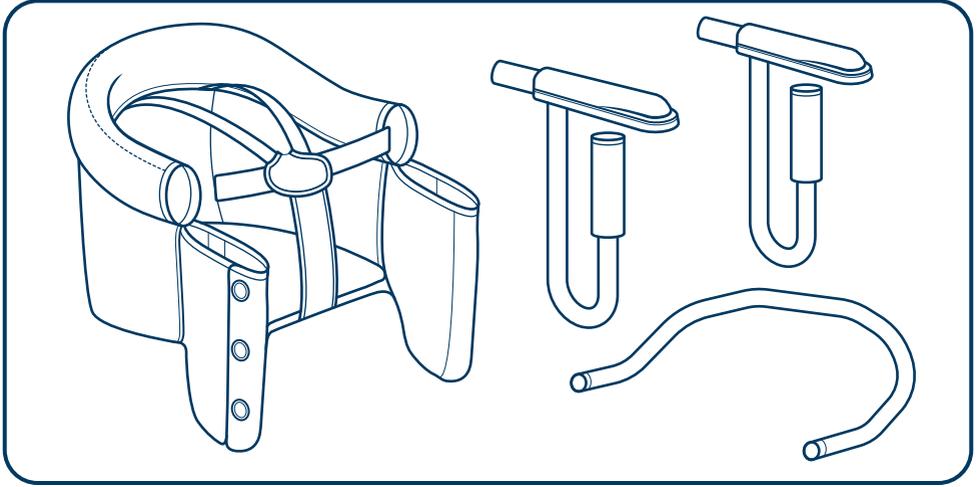


How to install.

DE Wie installiert man. **FR** Comment installer. **ES** Cómo instalar. **IT** Come installare. **NL** Hoe installeren. **PL** Jak zainstalować.

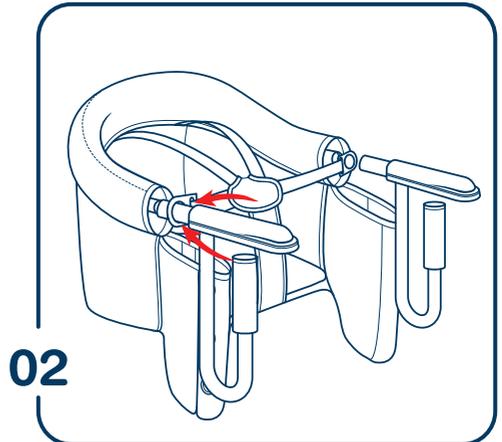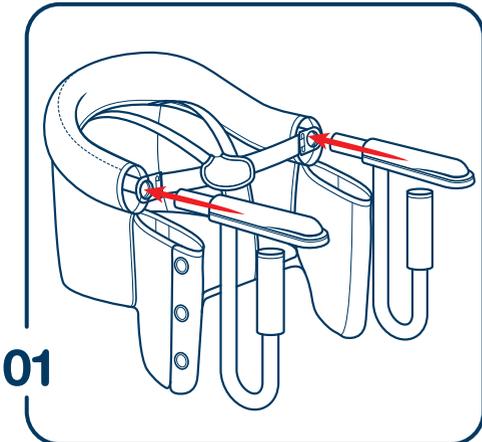


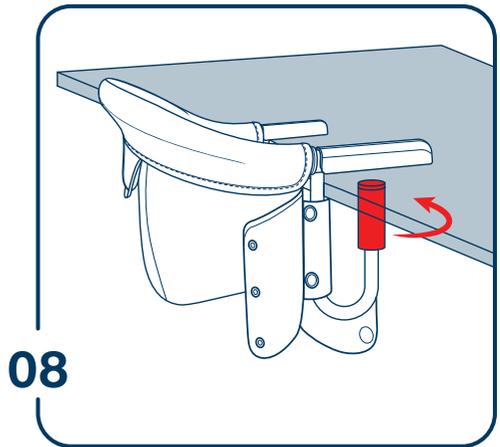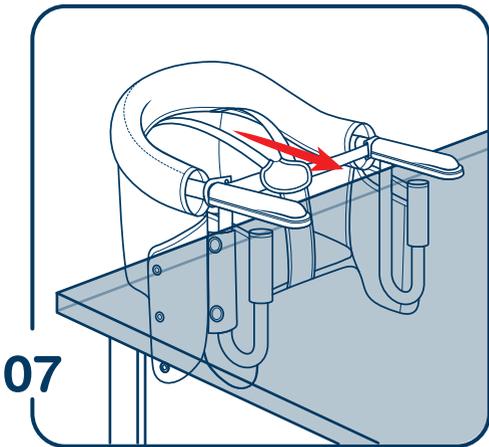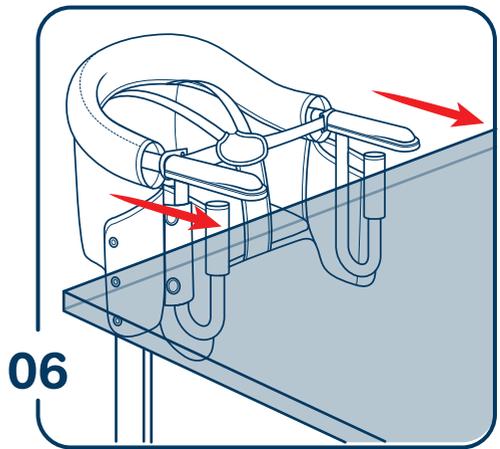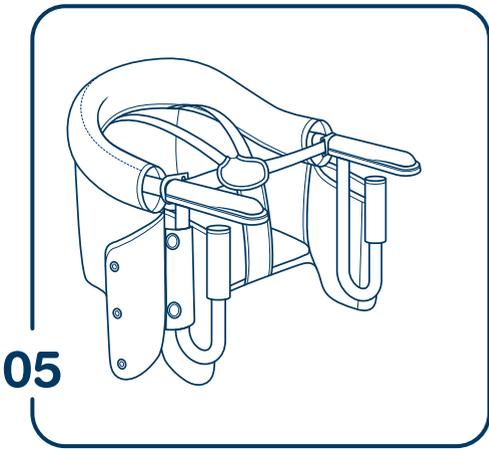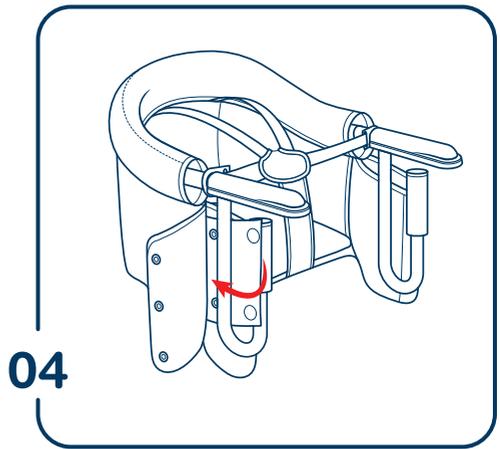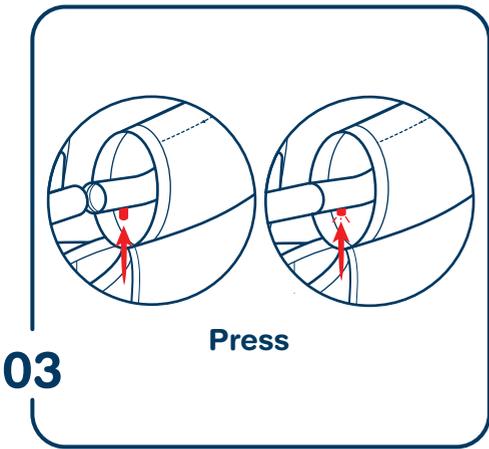

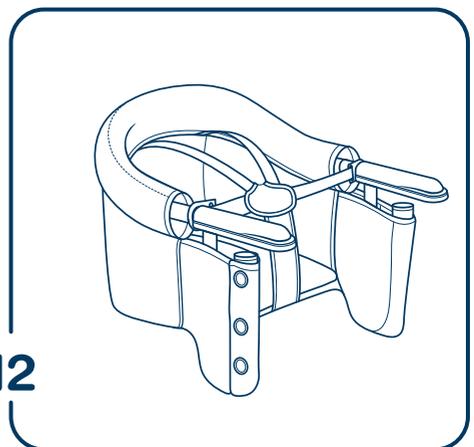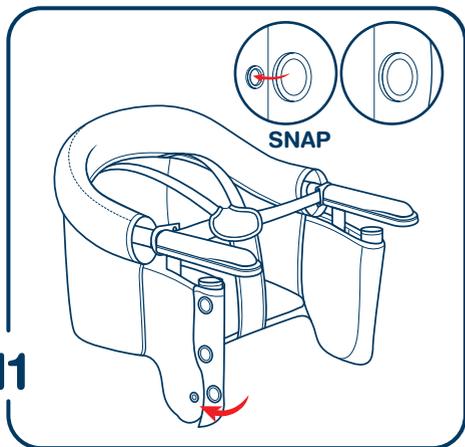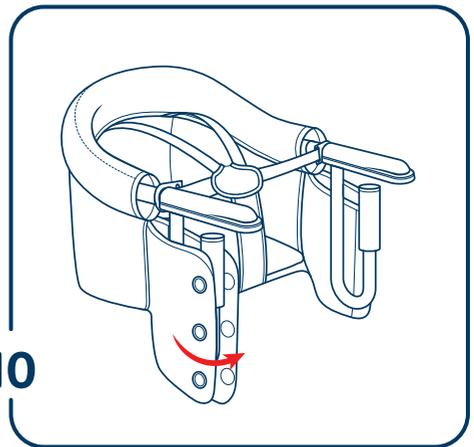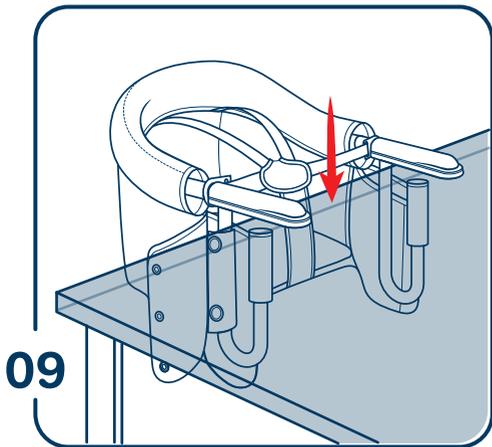


Check the Surface


DE Überprüfen Sie die Oberfläche. FR Vérifiez la surface. ES Comprobar la superficie. IT Controllare la superficie.
NL Controleer het oppervlak. PL Sprawdzaj powierzchnię.

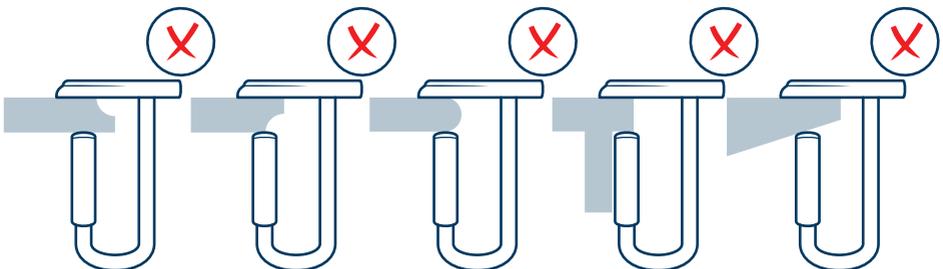


13

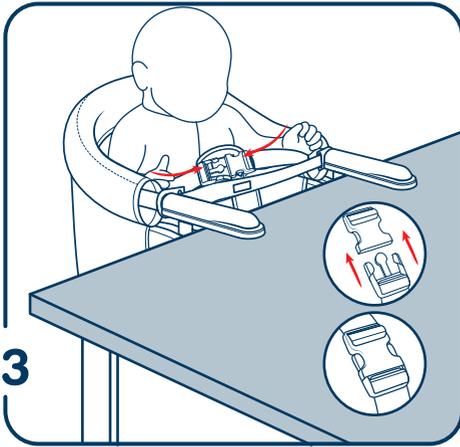

14

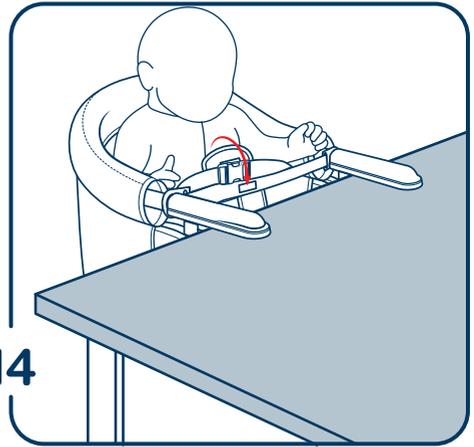

15

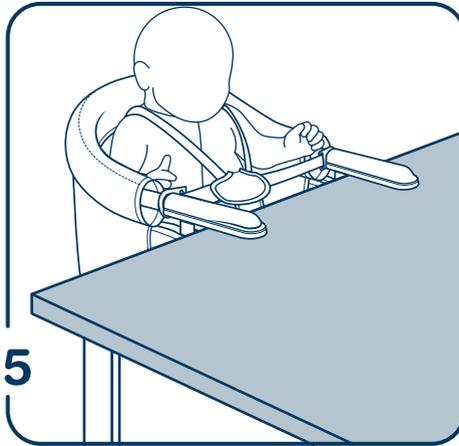

trunki[®]
Making travel child's play

Warnings & Safety Instructions:

- Read and retain all instructions before use. Improper use may lead to serious injury or death.
- Do not use if damaged. Only use when all components are securely fastened.
- Keep out of reach of children when not in use. This product is not a toy.
- Suitable for children who can sit upright unassisted, up to 15 kg / 33 lbs.
- Not suitable for children under six months of age.
- Always fasten the child using the full harness system.
- Insert the waist clips into the central buckle, loop the crotch strap over, and adjust for a snug fit.
- An improperly secured belt may cause the child to fall or slide out of the seat.
- Never leave a child unattended while in the chair. Always keep them within arm's reach.
- One child at a time only. Do not attach to tables already occupied by another child.
- Keep children and pets away while the chair is in use.
- Only attach to tables 20–90 mm / 0.8–3.5 inches thick.
- Use only on flat, solid table surfaces.
- Do not use on glass, card, loose, folding, or pedestal tables.
- Do not attach to tables with leaves, decorative edges, or tablecloths.
- Never attach to drawers or movable surfaces.
- Avoid placing near counters, table legs, or any surfaces the child could push against.
- Before each use, confirm the chair is securely fastened and the harness is properly adjusted.
- Keep clamps, table surfaces, and all components clean and dry to prevent slipping or instability.

Care & Maintenance:

- Inspect and tighten clamping mechanisms regularly to ensure safety.
- For transport, use the built-in storage bag for safe and compact carrying.
- Keep all parts clean and dry to prevent slipping, mildew, and rust.
- Wipe plastic and metal parts with a damp cloth and mild detergent.
- Do not use solvents, ammonia, or benzene.
- Dry all metal parts thoroughly after cleaning or exposure to water.
- Always store in a dry place. Do not store while wet or in damp environments — this may cause rust or mildew.
- Keep all parts, including moving components, clean and out of children's reach when stored.
- Make sure all users (including caregivers) read and understand the safety instructions.

Assembly:

1. Unpack all parts and lay them out on a clean, flat surface. Check all components listed in the manual are present and undamaged.
2. Ensure the frame is threaded through the fabric seat. Align the clamp mechanism with the frame and the plastic rings.
3. With the plastic rings looped onto the frame, push the clamp firmly until it clicks into place. The clamp should still rotate for folding. Repeat on the opposite side.
4. Wrap the smaller fabric around the arm.
5. Fasten with push buttons. Repeat on opposite side.
6. With the clamps open, attach the seat unit onto the secure table.
7. Ensure the seat is pushed as far as possible onto the table and the clamps hook under the table.
8. Rotate the clamp, securing it firmly to the table. Repeat on opposite side.
9. Gently shake the seat to confirm it is securely attached and stable before use.
10. Wrap outer fabric covers around clamp.
11. Fasten fabric using push buttons. Repeat on opposite side.
12. Open harness and place child into the seat.
13. Secure the child's harness snugly, ensuring no loose gaps remain.
14. Perform a final check to confirm all parts are properly installed and that the table or surface is sturdy enough to support the seat's weight.
15. Always supervise the child while they are seated in the chair.

Disassembly:

1. To disassemble the chair, first unfasten the safety harness and carefully remove the child, making sure their legs and feet are free from any parts of the chair or table.
2. Unbutton the covers over the arms and clamps. Loosen the clamps by turning them clockwise and gently pull the chair away from the table. Fold the arms inward and upward to reduce the chair's size for storage.
3. For a deeper disassembly, push the locking pins inward to release the support arms, slide off the plastic rings from the safety strap, remove the backrest bar from the seat lining, and take out the seat pad from underneath. To reassemble the chair, follow the same steps in reverse order.

Washing Instructions:

- The fabric seat should be hand washed separately in cold water.
- Do not bleach, iron, tumble dry, or dry clean.
- Use a soft brush periodically for fabric maintenance.
- Allow the seat to air dry completely before use or storage to avoid mold or damage.



©Heroes Group 2024
Trunki is a Heroes Group trade mark.
Onco Group Limited
Wisteria Grange Barn, Pikes End, Pinner,
Middlesex, HA5 2EX, UK.
EU Representative:
Heroes Iberia, S.L.U.
Calle del Limonero, 22,
28020 Madrid, Spain.
compliance@makeheroes.co

